

VBAT 684

Battery lights

Function	DMX Value	Settings	4 CH	6 CH	9 CH
Dimmer	000-255	0~100%		1	1
Red	000-255	0~100%	1	2	2
Green	000-255	0~100%	2	3	3
Blue	000-255	0~100%	3	4	4
White	000-255	0~100%	4	5	5
Program	0	Dimmer			6
	1-16	Program 01			
	17-33	Program 02			
	34-50	Program 03			
	51-67	Program 04			
	68-84	Program 05			
	85-101	Program 06			
	102-118	Program 07			
	119-135	Program 08			
	136-152	Program 09			
	153-169	Program 10			
	170-186	Program 11			
	187-203	Program 12			
	204-220	Program 13			
	221-237	Program 14			
	238-255	SOUND			
Speed	0-15	R (0) G (0) B (0) W (0)	Program 01		7
	16-31	R (255) G (0) B (0) W (0)			
	32-47	R (0) G (255) B (0) W (0)			
	48-63	R (0) G (0) B (255) W (0)			
	64-79	R (0) G (0) B (0) W (255)			

Function	DMX Value	Settings	4 CH	6 CH	9 CH
Speed	80-95	R (255) G (150) B (0) W (0)			7
	96-111	R (255) G (180) B (0) W (0)			
	112-127	R (255) G (255) B (0) W (0)			
	128-143	R (255) G (0) B (255) W (0)			
	144-159	R (255) G (0) B (140) W (0)			
	160-175	R (0) G (255) B (255) W (0)			
	176-191	R (255) G (0) B (0) W (210)			
	192-207	R (0) G (255) B (0) W (210)			
	208-223	R (0) G (0) B (255) W (210)			
	224-239	R (255) G (200) B (40) W (90)			
	240-255	R (255) G (255) B (255) W (255)			
	0-255	Speed: Slow to fast			
	0-255	Sensitivity 0-31			
		Program 01			
		Program 02-14			
		SOUND			
Strobe	0	No function		6	6
	1-255	Speed: slow to fast			

